

## Technical Procedure

# LifeBook P1610 RAM Replacement

ESD Precautions are required when working on this LifeBook computer.


Make sure the LifeBook is turned off before beginning this procedure.




1. Turn the LifeBook over and remove the battery



2. Extract 2 screws from the RAM cover

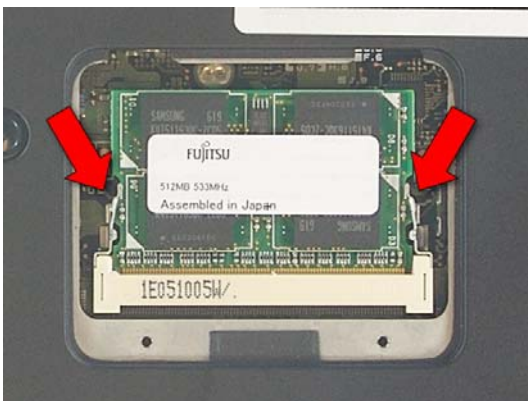

3. Press out on the locking clips to release the RAM, and lift it out.

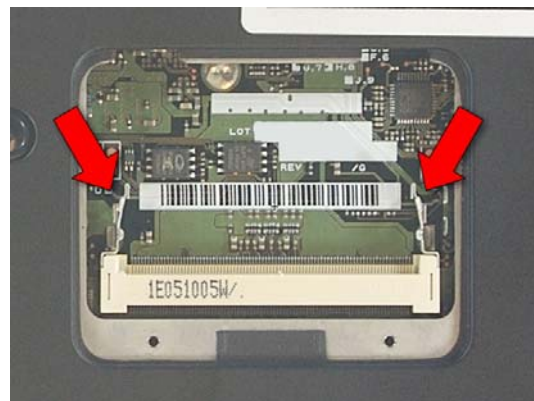

4. Place the new RAM into the slot and press down to lock it.



5. Lay it back down and turn the LifeBook over.



6. Replace the battery.